


# Sterile Adapter Kit Instruction for Use

Product# 14-4050

patent pending


**FIGURE 1**

Adapter kit in sterile chevron pouch

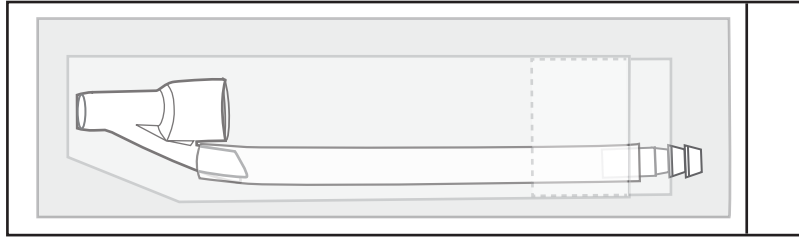


**FIGURE 2**

Peel open sterile pouch

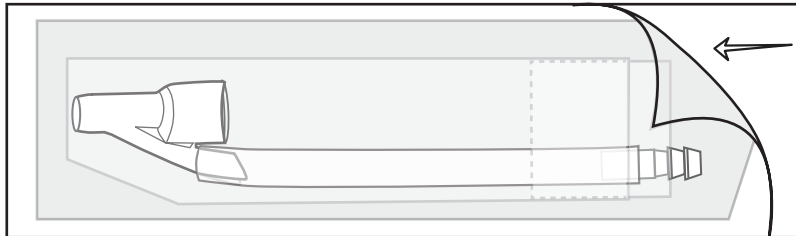


**FIGURE 3**

Insert handpiece into Y connector, inside sterile pouch

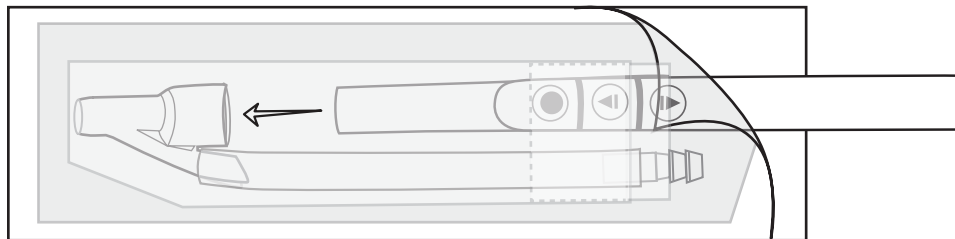


**FIGURE 4**

Connect suction tubing

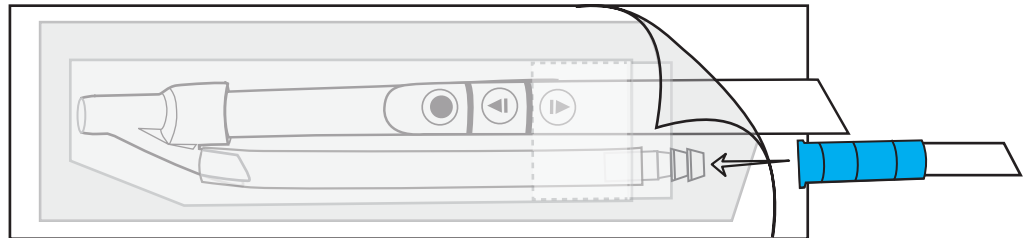

**FIGURE 5**

Remove sterile chevron pouch. Pull out folded sleeve to full length coverage

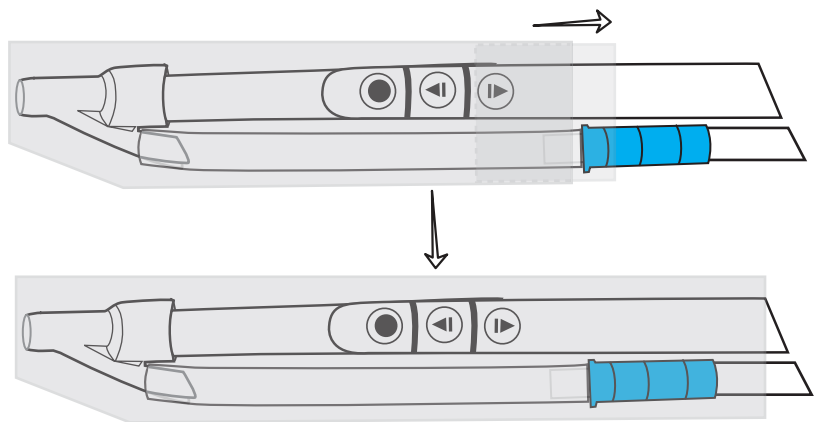

**FIGURE 6**

Insert special high-flow electrode tip

